


NOTE: RIGHT SIDE PANEL IS SHOWN. LEFT SIDE PANELS AT ENDS, CORNERS AND GATES SHALL BE OPPOSITE. PLACE PANELS AND BRACES ON THE INSIDE OF THE FENCE ENCLOSURE.

END, CORNER OR GATE PANEL

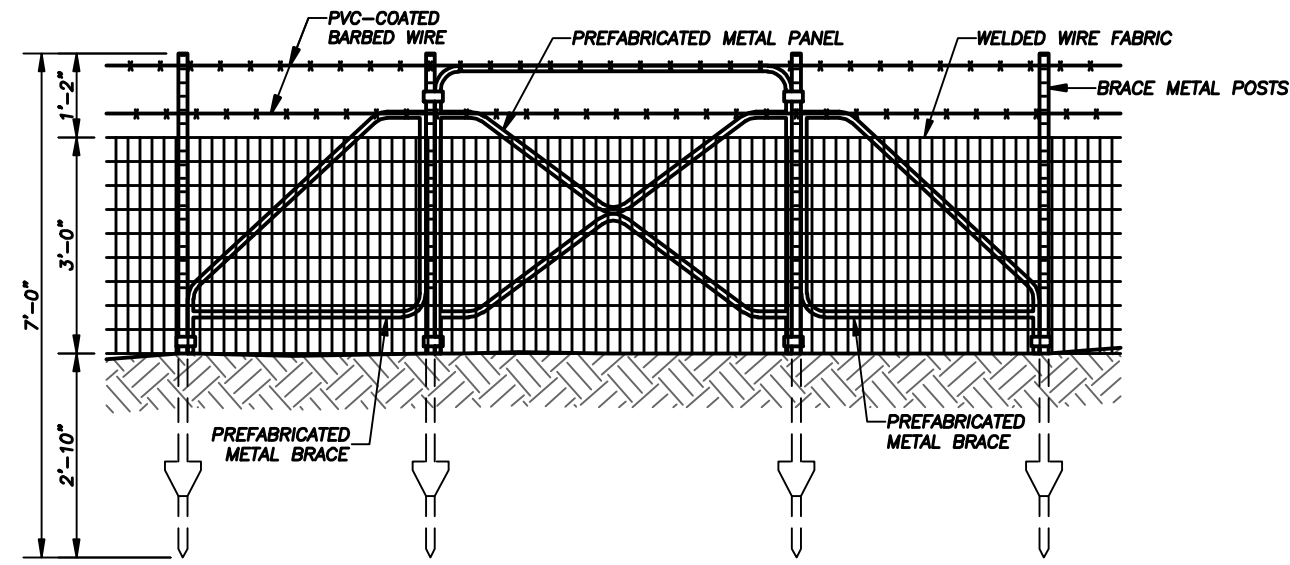

INTERMEDIATE BRACE PANEL

GENERAL NOTES:

1. USE CLAMPS PROVIDED BY THE MANUFACTURER TO ATTACH METAL POSTS TO PANELS AND BRACES. INSTALL BRACE PANELS ACCORDING TO MANUFACTURER'S INSTRUCTIONS. PREFABRICATED PANELS AND BRACES SHALL BE 'EASY FENCE' BY D-C INDUSTRIES OR EQUIVALENT.
2. RUN FENCE IN STRAIGHT LINES BETWEEN END AND CORNER POSTS. AVOID ACUTE ANGLES (LESS THAN 90') AT FENCE CORNERS.
3. IN SOLID ROCK, SET POSTS INTO HOLES ONE-HALF INCH LARGER IN DIAMETER THAN THE MAXIMUM CROSS-SECTIONAL DIMENSION OF THE POSTS. DRILL HOLES TO A DEPTH OF AT LEAST THREE TIMES THE HOLE DIAMETER.

ABANDONED MINE LAND PROGRAM
MINING AND MINERALS DIVISION
ENERGY, MINERALS AND NATURAL RESOURCES DEPARTMENT

SCALE: 3/8" = 1'-0"
DATE: AUGUST 25, 2006

CAROLINA LODE

DRAWN BY: JAK/JRS
REVISED:

WELDED WIRE FENCE DETAILS

LAKE VALLEY MINE SAFEGUARD PROJECT - PHASE II DRAWING NUMBER: FIGURE 45